



Pool & Spa WiFi Control System

Oasis Smart

INSTALLATION AND OPERATION MANUAL

TABLE OF CONTENTS

INSTALLATION INSTRUCTIONS..... 3

SENSORS 4

EXPANSION UNITS 4

INSTALLATION DIAGRAMS 5

OPERATING INSTRUCTIONS 6

CONTROLLER BUTTONS 6

CONTROLLER BUTTONS continued 7

MENU 8

NOTES 25

WARRANTY 26

TECHNICAL SUPPORT 27

FOR QUICK REFERENCE, RECORDS YOUR DETAILS HERE.	
Model No:	
Serial No:	
Purchase Date:	
Installer:	
Warranty Registered Online:	Yes / No

INSTALLATION INSTRUCTIONS

Fix the mounting bracket to a solid structure via screws and wall plugs kit provided, and slide the controller on, locking into place. Adjust the screws on the back of unit to ensure a snug fit.

To remove unit, lift and gently pull away from mounting bracket.

CONTROLLER MOUNTING

Find a suitable location to mount the control box. Ideally, as with all pool equipment, it should be installed out of direct weather and no closer than 3 metres from the water's edge, at a minimum 600mm above ground. The power cable is 1.8m long and should be plugged directly into a general power outlet, not into an extension lead.

Mount the pump and sanitiser according to the manufacturer's instructions.

SANITISER CONNECTION

The sanitiser (Ioniser, Chlorinator, etc) can be connected to any of the 240V sockets on either the Master Controller or on one of the Expansion Units. The sanitiser must be set to operate 24hrs per day as the OASIS SMART controller will control the number of hours per day the system will operate. Refer to the sanitiser instructions for 24hr timer setup and dosing requirements.

Note: Both the Sanitiser and the Filtration pump will need to be allocated sockets in 6.1 of the Installer Menu.

POWER OUTPUT CONNECTIONS

The 240VAC Output Sockets are for equipment to be controlled via the OASIS SMART controller. Each socket can be assigned via the menu and/or app.

The maximum combined load for both sockets on the master controller, is 9.98 AMPS at 2395W.

HEATER CONTROL

Set the heaters temperature limit to maximum (40°C). The heaters internal control will be interrupted, to turn off heating. The heater interlock cable connects to the green socket marked INT which switches on (closes) the voltage free NO/C relay contacts when the heater is to be turned on. The heater end of the interlock cable connects in series with the heater's pressure/flow or fireman's switch. Contact the heater manufacturer for the best location to connect to.

The heater interlock is for extra low-voltage (MAX 24V at 1Amp) switching only.

Note: If the heater's flow or pressure switch circuit is 240Vac, an external relay (KIT10) which can be purchased separately, is to be connected by a licensed electrician.

If the heat pump/gas heater is equipped with a "Demand Heat" function, the heater interlock cable will be connected into the socket labelled as "Pump Call". The controller will over-ride the filter pump when flow is called for by the heat pump which monitors the temperature within its own defined run times. Connect the heater cable from the controller output to the heater's connection point. Check with heater manufacturer for correct interlocking procedure.

Note: If the heater's flow or pressure switch circuit is 240Vac, an external relay (KIT11) which can be purchased separately, is to be connected by a licensed electrician.

VALVES

The OASIS SMART has 4 valve actuator sockets for the controlling of solar heating, water features, pool/spa water flow, and In Floor cleaning.

Note: If wiring your own supplied valve then wire as per the label on the base of the controller (Red, Black then White) red and white are for direction control and black is the common. Ensure the switch on the valve actuator is in the ON position. Refer the valve instructions for mounting requirements, cam adjustments etc.

Maximum power for the VALVE output is 24VA.

SENSORS

POOL SENSOR

The pool sensor must be fitted into the heating circuit, upstream of the heater and preferably in a position out of direct sunlight. It is recommended that a 14.5mm hole be drilled in the side of the PVC pipe (not the top of the pipe where water will collect), this can be carried out using a **Oasis** PD01 grinding drill or a small pilot hole can be drilled with a 14.0mm drill-bit used spinning in a counter clockwise direction to minimize the chance of shattering pipe.

Insert the grommet into the pipe and gently push in the sensor barb. Ideally ~30cm of the cable from the sensor should be tied to the shaded side of the pipe to prevent extreme ambient conditions leeching into the sensor via the copper in the cable. The blue sensor plug is to be fitted to either Sensor 1 or 2 port located beneath the controller (see diagram on p 4).

ROOF SENSOR

If a roof sensor is installed, it must be fitted into a small piece of collector material away from the main collector but on the same aspect, preferably no more than 50cm from the roof gutter (for ease of sensor replacement).

If required, the roof sensor can be on a different roof as the solar collector as long as the alignment to the sun is similar to the solar collector. For encapsulated collector panels use the manufacturer's instructions for roof sensor placement. The red sensor plug is to be fitted to either Sensor 1 or 2 port located beneath the controller (see diagram on p 4).

SENSOR NOTES

All excess cable must be removed; coils of cable are not permitted under any circumstances and **must not** be tied to 240V wiring.

If the cable is to be extended with non-genuine cable a size of 14/020 should be used. **Any cable joins should be soldered.** Heat shrink is to be used over soldered joints to eliminate moisture ingress.

EXPANSION UNITS

The OASIS SMART has the capacity to have an additional 2 expansion units connected to it. Each Expansion Unit has an additional 3, 240VAC Output sockets that are controlled via the OASIS SMART controller. Up to an additional 6 power sockets can be utilised and controlled by the OASIS SMART master controller.

The Expansion Units are rated at either 10Amps or 15Amps. All 3 sockets of the Expansion Unit are rated the same. 3 sockets at 10Amps or 3 sockets at 15Amps.

EXPANSION UNIT MOUNTING

Find a suitable location to mount the control box. Ideally, as with all pool equipment, it should be installed out of direct weather and no closer than 3 metres from the water's edge, at a minimum 600mm above ground. The power cable is 1.8m long and should be plugged directly into a general power outlet, not into an extension lead.

Mount as per main controller.

POWER OUTPUT CONNECTIONS

The 240VAC Output Sockets are for equipment to be controlled via the OASIS SMART. Each socket can be assigned via the menu and/or app.

The maximum combined load for all three sockets of the module is either 9.98 Amps / 2340 Watts or, 14.98 Amps / 3540 Watts. Please refer to the unit's rating label.

The 15Amp rated expansion unit must be plugged into a 15Amp rated GPO

INSTALLATION DIAGRAMS

The OASIS SMART'S Master Controller and an Expansion Unit.

MASTER CONTROLLER

Pin 1 is on the right-hand side of the plug




EXPANSION UNIT/S 10 & 15AMP

Expansion Unit 1
Socket 3
OR
Expansion Unit 2
Socket 6

Expansion Unit 1
Socket 4
OR
Expansion Unit 2
Socket 7

Expansion Unit 1
Socket 5
OR
Expansion Unit 2
Socket 8

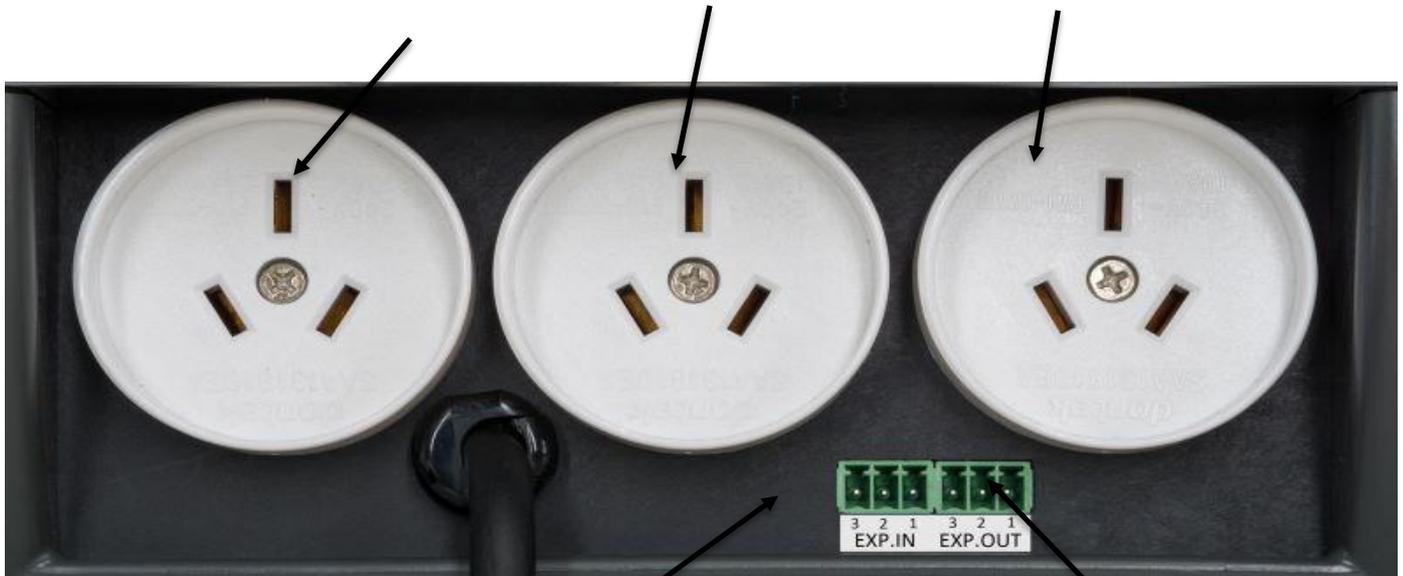

If Expansion Unit 1, the connection cable to the master controller will plug in here.
If Expansion Unit 2, the connection cable runs from here to Expansion unit 1

If Expansion Unit 1, the connection cable from Expansion Unit 2 will plug in here. It will be unused if there is no Expansion Unit 2.
If Expansion unit 2 connection port is

OPERATING INSTRUCTIONS

LCD SCREEN

In Automatic (Pool) mode the LCD screen displays; the time of day, what time the current filtration cycle will finish/start at, if more than one filtration cycle is set, then the start time of the next filtration cycle is displayed, current pool and roof temperatures or any faults are displayed, current status of the pump (run/inactive), Heat Demand time (if active), and whether the WIFI is active or disabled.

In Spa mode the LCD screen will display; the time of day, SPA MODE on, pool temperature or sensor fault, Temperature – both current temperature and set temperature of the spa, pump status, and WIFI status.

LCD INDICATORS

There are arrow icons on the LCD screen that point to text on the label.

CONTROLLER BUTTONS

AUTO

Pressing the AUTO button will run the controller in automatic pool mode. If the AUTO button is pressed while in the settings menu, the changed settings will be used but not saved. If there is a power failure the controller will retrieve the previously saved settings. On power-up the controller will start automatic pool operation.

BACK

Pressing the BACK button will allow you to go back to previous menu options.

ENTER

Pressing the ENTER button will turn on the LCD backlight or

Pressing the ENTER button will accept the currently displayed setting option.

MENU

After pressing the MENU button, a range of options can be selected from and changed. The selectable options in the MENU are as follows:

1. FILTER TIMES
2. TEMPERATURE SETTINGS
3. CONTROL
4. TIMERS
5. LIGHTS
6. INSTALLER MENU

UP & DOWN

The UP & DOWN buttons allow you to scroll through different functions and or settings in the menus, as well as increasing or decreasing temperature settings.

CONTROLLER BUTTONS continued

SPA

The SPA button allows you to toggle between Pool and Spa modes.

Pressing the SPA button begins the process of heating the spa to the spa temperature limit. The pool/spa valves will move to the spa and prime the pump if required. Heating will occur to the displayed set temperature.

To return to automatic pool operations press the AUTO button or press the SPA button to return to automatic pool operations.

PUMP

If at any time the PUMP button is pressed the pump is switched on and the following will be displayed:

3 MINS BACKWASH

ENDS IN xx:xx:xx

This function is used for a system back wash, pool vacuuming, manually running the system for a set amount of time, running the filtration system after adding chemicals, etc. It can also be used to stop the pump from running (if maintenance is required) for a set amount of time.

Use the Up/Down buttons to increase or decrease the amount of time that the pump will run, or not run. The countdown timer lets you know how much time is left until the manual function ends.

The timer amounts after the 3 minute backwash are:

The timer amounts to stop the pump are displayed as follows:

- | | |
|--|--|
| <ul style="list-style-type: none"> • PUMP ON: 30 MINS, • PUMP ON: 1HR, • PUMP ON: 2HR, • PUMP ON: 3HR, • PUMP ON: 5HR, • PUMP ON: 9HR, • PUMP ON: 10HR, • PUMP ON: 15HR, • PUMP ON: 20HR, and • PUMP ON: 24HR. | <ul style="list-style-type: none"> • HOURS OFF: 01HR, • HOURS OFF: 02HR, • HOURS OFF: 03HR, • HOURS OFF: 05HR, • HOURS OFF: 09HR, • HOURS OFF: 10HR, • HOURS OFF: 15HR, • HOURS OFF: 20HR, and • HOURS OFF: 24HR. |
|--|--|

At any time during the count down, if you press the ENTER button, the timer will reset to the selected time, and start again.

During the count down, if you press the PUMP button again, the controller will return to automatic operation.

Note: It is advisable to go into Installer Setup first and enter all equipment that will be utilized / allocated in the Menu functions.

MENU

The menu system can be navigated using the ↑ or ↓ buttons. All selectable and changeable values will be displayed on the LCD screen. Press the ENTER button to accept the currently displayed item.

All menu items are shown below:

1. FILTER TIMES
2. TEMPERATURE
3. CONTROL
4. TIMERS
5. LIGHTS
6. INSTALLER MENU

1. FILTER TIMES

You have the option to choose up to 4 different Filtration Times.

When you select the FILTER TIMES menu option, the screen will display:

```
FILTER          ON
TIME 1         OFF
```

When you select ON and press ENTER the screen will display:

```
FILTER          XX:XX
TIME 1 ON       XX:XX
```

Adjust the start time and end time for the required filter cycle. The circulation pump will run between these times for filtration purposes.

Once you have set the first filter time, you will then be asked to select a pump speed for the first filter cycle.

Note: This will only be displayed if you have installed a Multi Speed Pump through the Installer Setup (6.2). You won't be asked for a pump speed if Single Speed pump was selected in the Installer Setup (6.2).

This will be displayed as:

```
FILTER TIME 1
SPEED 1, (2,3, or 4 can be selected, depending on pump).
```

Once you have selected a speed for the first Filter Cycle, the option for a second filter cycle will be displayed:

```
FILTER  ON
TIME 2  OFF
```

Set and adjust as with Filter Time 1 or if not required then set the timer to OFF.

Repeat the above steps for Filter Time 3 and 4.

Note: You can run different pump speeds in the separate filter times.

- Filter cycle 1 may run at speed 4, filter cycle at speed 2, filter cycle 3 at speed 1, and filter cycle 4 at speed 4.

For example:

- Filter Time 1: 8.00 – 9.00 at speed 4.
- Filter Time 2: 9.00 – 15.00 at speed 2.
- Filter Time 3: 15.00 – 16.00 at speed 4.

2. TEMPERATURE

When you enter Temperature Settings, the first setting that will be displayed is:

POOL
TEMPERATURE 27o.

****Range is OFF, 20oc to 40oc in 1oc increments. Default is 27oc.****

This temperature is the minimum pool temperature that you would like the Heater to heat the pool to if a heater is utilised.

The temperature limit can be increased or decreased with the ↑ **or** ↓ buttons to a temperature of your choice.

Once you have selected a Pool Temperature, press Enter and the temperature will be set. The controller will then display:

SPA
TEMPERATURE 37oc.

****Range is OFF, 20oc to 40oc in 1oc increments. Default is 37oc.****

This is the temperature that you would like the SPA to be at when in use.

The temperature limit can be increased or decreased with the ↑ **or** ↓ buttons to a temperature of your choice.

Once you have selected a Pool Temperature, press Enter and the temperature will be set. The controller will then display:

SOLAR
TEMPERATURE 30oc.

****Range is OFF, 20oc to 40oc in 1oc increments. Default is 30oc.****

This is the temperature you would like the solar to heat the pool to, if it is utilised.

The temperature limit can be increased or decreased with the ↑ **or** ↓ buttons to a temperature of your choice. Once you have selected a Pool Temperature, press Enter and the temperature will be set.

The controller will then return you to the Main Menu.

3. MANUAL ON

In this menu setting you will be able to manually turn on any socket or valve that has been allocated an appliance.

Socket 1 through to 8, and valve 1 through to 4, if allocated.

Press Enter to open the setting and the controller will display:

S1: XXXXXXXXXX
AUTO

Use the ↑ **or** ↓ buttons to move between the allocated sockets and valves.

If a socket or valve hasn't been allocated an appliance, then it won't be shown.

Press the Enter button to toggle between; AUTO, OFF, & ON.

Press the Auto Button to return all appliances to normal automatic operation.

Please remember that you will also need to turn the appliance back to Auto, otherwise it will continue to run.

Note 1: If a socket has been set to ALWAYS ON, then you won't be able to turn it on manually.

Note 2: If a valve has been allocated to Pool/Spa, you will not be able to turn it on using this menu option.

4. TIMERS

When you enter the TIMER menu, you can set a number of the allocated appliances on a timer. The appliance has to be allocated a socket or valve to be allowed a Timer setting. Each appliance has the choice of either; Off, 1 time, or 2 timer allocations.

****Note: Time periods for different appliances can overlap each other.****

The first available appliance to be set on a timer will be displayed as:

Socket #X

XXXXXXXXXXXXX.

Press the ENTER button to be able to adjust the time setting or use the ↑ or ↓ buttons to display the Appliance to be set.

You will see displayed:

XXXXXXXXXXXXX

TIME 1 ON.

Toggle the ↑ or ↓ buttons to either turn the appliance ON or OFF the timer.

If you select OFF the next allocated appliance will be shown.

If you select ON then the controller will display:

XXXXXXXXXXXXX

TIME 1 FRM XX.XX

Use the ↑ or ↓ buttons and the Enter button to allocate a start time. Once the time has been entered, the next display will be:

XXXXXXXXXXXXX

TIME 1 TO XX.XX

Use the ↑ or ↓ buttons and the Enter button to allocate an end time. Once the time has been entered, the next display will be:

XXXXXXXXXXXXX

TIME 2 ON/OFF

Adjust TIME 2 setting as with TIME 1.

Once the TIMER setting has been completed you can move onto the next allowable appliance. Adjust and set as above.

Notes:

- **Socket type “Sanitiser” is not allowed on appliance timer, as it follows filter timer.**
- **Socket type “Filter Timer” is not allowed on appliance timer, as it follows filter timer.**
- **Socket type “Solar” is not allowed on appliance timer, it follows solar configuration.**
- **Socket type “Always On” is not allowed on appliance timer.**
- **Socket type “Blower” is not allowed on appliance timer, used only in Spa mode.**
- **Socket type “Jet Pump” is not allowed on appliance timer, used only in Spa mode.**
- **Socket type “Ind Heat Pump” is not allowed on appliance timer, it follows heating configuration.**
- **Valve type “Pool/Spa” is not allowed on appliance timer, used on in Pool/Spa mode.**
- **Valve type “Solar” is not allowed on appliance timer, as it follows solar configuration.**
- **VF contact types are not allowed on appliance timers.**

Please ensure that when you set the timers for different appliances, that the maximum combined load DOES NOT exceed either the controller’s power rating, or the power rating of the expansion unit when the different appliances are turned on at the same time.

5. LIGHTS

In this menu setting, you can only change the colour of your allocated Pool and Spa light/s. Garden lights are not given the option of colour changing.

The socket number and the brand/type of light must have been allocated in the Installer Setup under Appliances (6.3) before you can change the colours through this menu option.

When you enter the Lights menu the controller will display the allocated socket number, allocated light type, and the brand/style of light. For example.

S6: POOL LIGHT

SINGLE COLOUR

The ↑ **or** ↓ buttons can be used to move between the allocated lights to the light you wish to change. Once the Light is displayed on the screen, press Enter and the controller will display:

S6: (Brand name)

(current colour)

Use the ↑ **or** ↓ buttons to toggle through the range of colours (if any) associated with that brand of pool light. Press Enter to accept the colour you wish to choose.

If you so wish you can then move onto another allocated socket and change the colour settings of that socket.

Adjust the colour as described above.

Note: A maximum of 3 sockets can be allocated to lights, whether Pool, or Spa.

Each socket/group of lights will be the same colour as chosen for that allocated socket.

6. INSTALLER MENU

The Installer Setup is where you will go to enter all the equipment that is installed on the Pool/Spa system and can have its settings changed in the Menu functions or via the App.

Under the Installer Menu there is a range of options to choose from. These are:

1. Appliances
2. Pump
3. Lights
4. Heating
5. Spa
6. Heat Demand
7. Pump Call
8. Water Feature
9. Temperature Sensor
10. Expansion Unit
11. Set Time
12. WIFI
13. Reset Passcode
14. Factory
15. About

Use the ↑ **or** ↓ buttons to toggle through the list of menu options. When the option you want is displayed on the screen, press the Enter button.

6.1 APPLIANCES

Appliances can be allocated on up 8 power sockets, 4 valves and 1 VF contact.

Socket 1-2, Valves 1-4, and the VF Contact are all located on the master controller.

Sockets 3, 4, & 5 are located on Expansion Unit 1.

These sockets are only available for selection if the expansion unit is there and has been enabled.

Sockets 6, 7, & 8 are located on Expansion Unit 2.

These sockets are only available for selection if the expansion unit is there and has been enabled.

The list of appliances available to choose from are listed below:

Sockets

- | | | |
|-----------------|-----------------|---------------------------------|
| • Sanitiser | • Pool Light | • Other |
| • Filter Pump | • Spa Light | • Always On |
| • Cleaning Pump | • Garden Light | • Jet Pump |
| • Blower | • Water Feature | • Heating Pump
(independent) |
| | • Solar Pump | • None |

Valves

- | | | |
|---------------|---------------------|--------|
| • Pool/Spa | • In Floor cleaning | • None |
| • Filter Pump | • Water Feature | |

VF Contact

- | | | |
|--------------|-------------|--------|
| • Gas Heater | • Heat Pump | • None |
|--------------|-------------|--------|

When you enter the Appliance Menu, the first thing that will be displayed is:

SOCKET #1

(currently allocated appliance)

The ↑ **or** ↓ buttons are used to toggle between the Sockets of the Master Controller then Expansion Unit 1, then Expansion Unit 2, then the Valves and VF Contact of the Master Controller. Once the Appliance you want to change is displayed on the screen, press Enter.

This will move the cursor next to the allocated appliance. Use the ↑ **or** ↓ buttons to toggle through the range of Appliances that can be selected for that output. Once the Appliance you want to select is displayed, press Enter. The Appliance will have been selected and the controller will then display the next socket/valve/VF contact:

SOCKET #2

(currently allocated appliance)

Note: When you move onto the next appliance the cursor will still be next to the allocated appliance.

If you wish to change this appliance simply use the ↑ **or** ↓ buttons to toggle through the range of allowable appliances. Press Enter to select.

Keep pressing Enter to scroll through the allocated appliances (if there is another socket, valve, or VF contact you wish to change) until the appliance you wish to change is displayed. Use the ↑ **or** ↓ buttons to toggle through the range of allowable appliances. Press Enter to select.

Alternatively, if you don't want to change any more appliances, press the MENU button to exit.

6.1 APPLIANCES CONTINUED

When changing the Valve appliances, the controller will display:

VALVE #1
(currently allocated appliance)

The Valve appliance is changed the same way as the Socket appliances.

Note: The Oasis SMART Controller will only turn 2 valves at the same time, ie Pool/Spa valves. There will be a 40 second delay before a third or fourth valve will be turned.

When changing the VF Contact, the controller will display:

VF CONTACT
(currently allocated appliance)

The VF Contact is changed the same way as the Socket & Valve appliances.

6.2 PUMP

In this menu option, you will be able to select which type and brand of filtration pump your system is running and what its default speed will be.

When you Enter this sub menu option, the controller will display the option to choose either a Single Speed Pump or Multi Speed Pump:

PUMP TYPE
MULTI-SPEED

Use the ↑ **or** ↓ buttons to switch between the 2 options, press Enter to accept the option you require.

If you Enter SINGLE SPEED, the controller will accept the option and return you to the Installer Setup Menu.

If you Enter MULTI SPEED, then the controller will display:

PUMP BRAND
THERALUX.

Use the ↑ **or** ↓ buttons to scroll through the range of allowable pump brands. Press Enter on the brand you wish to select when you see it displayed.

The options for brands of Multi Speed Pumps are:

Theralux	Theralux 485	Pentair VS/F	DAB
Reltech	Reltech 485	Insrg	Henden

Once you have pressed Enter to select the pump, the controller will ask you to set 4 pump speeds.

- In the case of the Theralux 485, Reltech 485, & Insrg brand pumps, you will be asked to set the speeds in RPM.
- In the case of the Pentair VS/F, Theralux, Reltech, & Henden pumps, you will be asked to set the default speed only as the pump has pre-set speeds.
- In the case the DAB brand, you will be asked to set the 4 speeds as a percentage.

Note: The Theralux, Henden, and Reltech pumps only have 3 speeds to choose from and need to be set via the manufacturer's instructions.

6.2 PUMP CONTINUED

Once the speeds have been set for the Theralux 485, Relthech 485, Insnrg, Henden, and DAB pumps, the controller will then ask what Default speed you would like the pump to be set at.

This is displayed as:

PUMP DEFAULT

SPEED X

Use the ↑ **or** ↓ buttons to scroll through the range of pump speeds (1, 2, 3, & 4) that you have just set.

Once you have adjusted the default speed, press Enter to accept.

The controller will accept the default speed and return to the Installer Setup Menu.

6.3 LIGHTS

In this menu option, you will be able to select which type and brand of Pool & Spa lights that you have installed.

- *A maximum of 3 sockets can be allocated to lights, whether Pool, or Spa. Each of the 3 sockets will run a Light Transformer. Each socket/group of lights will be the same colour as chosen.*
- *Before any pool or spa lights can be setup in this menu option, 1, 2, or 3 sockets need to have been allocated in appliances to either the pool or spa light.*

When you enter this menu option, the first socket that has been allocated will be displayed along with the allocated appliance. The controller will display:

S2: SPA

SINGLE COLOUR

Use the ↑ **or** ↓ buttons to scroll through the allocated sockets, press Enter to change the displayed socket.

After you press Enter, the cursor will be located on the second line. Use the ↑ **or** ↓ buttons to scroll through the allowable brands of lights.

The allowable brands and types are as follows:

AquaQuip	Spa Electrics	ModLite
AquaQuip INS	Spa Electrics Multi Plus	Single Colour (non-branded)
Aquatight	Astral Pool	

Press Enter to select the light brand installed.

The controller will now display: (For Example)

AQUAQUIP

PURE RED

Use the ↑ **or** ↓ buttons to scroll through the colours that are associated with the brand of light.

Once the colour you want is displayed on the screen, press Enter to accept the colour.

- If there is only one socket that is allocated to a light, the controller will return you to the Installer Setup Menu.
- If there is more than one socket allocated to a light, the controller will keep you in this menu option. You can use the ↑ **or** ↓ buttons to scroll through the other allocated sockets. Press Enter when another allocated socket is displayed in order to change that sockets settings. Change the settings as above.

Once you have finished, either press the Back Button to return you to the Installer Setup Menu or press the Menu Button to return the controller to normal operations.

6.4 HEATING

In this Menu option, you will be setting up the type/s of heating that is installed. The options are:

Solar

Heat Pump

Gas Heater

When you enter this menu option the first thing that is displayed is:

SOLAR

1. NONE

With Solar Heating, you have the options of:

1. None
 2. Separate (Independent plumbing)
 3. Valve
 4. Boosted (Integrated plumbing)
- If you have no Solar Heating installed, press Enter to accept 1. None and the controller will move you onto the next option.
 - If you have an independent solar heating system, use ↑ **or** ↓ buttons to scroll down to 2. Separate and press Enter. The controller will display:

SOLAR

SENSOR: SOLAR

Using the ↑ **or** ↓ buttons and press Enter to select, will give you the option to select whether the pool sensor is located within the Ind solar line or within the filtration line. Once you have selected an option the controller will display:

SOLAR

START TIME XX.XX

Use the ↑ **or** ↓ buttons to adjust the time you would like the solar to start. Press Enter to accept the hours, then adjust the minutes and press Enter.

- If you have a system where a valve is turned to send water into the solar panels, select 3. Valve.
- If you have a Boosted (integrated) system, scroll to 4. Boosted and select.

With options 3. Valve & 4. Boosted, (once you have pressed Enter to select) the controller will display:

SOLAR

SPEED X

The controller is asking what speed you would like the pump to run at when solar heating is asked for.

Note: If you are running a single speed pump, this question will not appear.

Use the ↑ **or** ↓ buttons to select which pre-set speed you would like, and press Enter.

Once you have selected the pump speed, the controller will then display:

SOLAR

START TIME XX.XX

Adjust as above.

Once you have adjusted and accepted the Solar Heating start time, the controller will move you onto the next option.

What will be displayed next will depend upon what was selected for VF Contact in Appliance Setup.

If nothing was selected under VF Contact then the controller will return you to the Installer Setup Menu.

6.4 HEATING CONTINUED

If **Heat Pump was selected under VF Contact**, then the following will be displayed:

HEAT PUMP ON
OFF

Use the ↑ **or** ↓ buttons to move the cursor to either ON or OFF.

Enter On to enable the controller to run the Heat Pump or OFF to disable the heater.

Press the Enter button to accept.

Once you have accepted either ON or OFF, the controller will display a choice of 3 Heating Installation Type options:

1. FILTER
2. INDEPENDENT
3. INDEPENDENT WITH SENSOR

You will use the ↑ **or** ↓ arrows to select the option that best suits your installation, press Enter to accept and the controller will move you onto the next option.

- Filter – Meaning that the heater is installed within the filtration plumbing.
- Independent – Meaning that the heater is plumbed in separately to the filtration system and will have its own circulating pump. The pool will be heated to a temperature designated by the independent heater.
- Independent with Sensor – The heater is plumbed independently, but the Oasis SMART will controller the temperature and will need the pool sensor drilled into the pipe in front of the Independent heaters circulation pump.

If **Gas Heater was selected under VF Contact**, then the following will be displayed:

GAS HEATER ON
OFF

If you select ON, the controller will then display:

GAS HEATER
COOL DOWN XXMIN

This is the controller asking how many minutes you would like the filtration pump to run for once the Heater has stopped heating. Use the ↑ **or** ↓ buttons to increase or decrease the amount of time.

The range of time for the Cool Down is 00Mins to 59Mins.

Note: This function is here to help prolong the life of a Gas Heater. 5Mins is an acceptable minimum but the time can be extended if so desired.

Once you have selected the timeframe you would like for the Gas Heater COOL DOWN, the controller will ask you to select one of the 3 Heating Installation Types.

1. FILTER
2. INDEPENDENT
3. INDEPENDENT WITH SENSOR

You will use the ↑ **or** ↓ arrows to select the option that best suits your installation, press Enter to accept and the controller will move you onto the next option.

If you select OFF, the controller will move you onto the next option and display:

HEATING PUMP
SPEED X

Use the ↑ **or** ↓ buttons to select which pre-set speed you would like, and press Enter, and the controller will exit you to the Installer Setup Menu.

6.5 SPA

In this menu option, you are able to turn ON or OFF Spa operation, and Spa options.

Use the ↑ or ↓ buttons to highlight either ON or OFF. Press Enter to accept.

Note: These Spa options can only be turned ON or OFF if they have been allocated a socket in the Appliances Menu.

Select OFF, and the controller will turn off all spa options (including use of the SPA button on the front of the controller) and return you to the Installer Setup Menu.

If you select ON then the controller will display (only if allocated):

BLOWER ON
 OFF

If you select ON, the controller will display:

BLOWER
SWITCH ON AT XX°

Use the ↑ or ↓ buttons to select what temperature you would like the Blower to turn on at and press Enter to accept.

Note: The Temperature range is within a 10o offset from the set Spa temperature or Always On.

If you select OFF, the controller will move you to the next option and display: (only if Allocated)

JET PUMP ON
 OFF

If you select ON, the controller will display:

JET PUMP
SWITCH ON AT XX°

Use the ↑ or ↓ buttons to select what temperature you would like the Jet Pump to turn on at and press Enter to accept.

Note: The Temperature range is within a 10o offset from the set Spa temperature or Always On.

Note 1: If you have both a Blower and a Jet Pump allocated under Appliances, the controller will let you select ON for Blower but will wait until after you select ON or OFF for Jet Pump before asking you what temperature you want temperature you want the Blower to turn on at.

Note 2: If you select ON for both the Blower and the Jet Pump, the message that is displayed is:

BLOWER + JET PUMP
SWITCH ON AT XX°

Once you have adjusted the above, the controller will display:

SPA ON
CHLORINATOR OFF

If you select OFF to Spa Chlorinator, the controller will move you onto the next option.

If you select ON, the controller will display:

SPA CHLORINATOR
DUTY CYCLE 10%

Use the ↑ or ↓ buttons to adjust the percentage of chlorination you would like, while the Spa is running. The percentage is adjustable in lots of 10% from 0% to 100%. Adjust and press Enter to accept. The controller will move you onto the next option.

6.5 SPA CONTINUED

Once you have selected the temperature for the Blower and/or Jet Pump, and you have adjusted the Chlorinator Duty Cycle, the controller will move to the next option, selecting the Spa Pump speed (if a Multi Speed pump is installed) and will display:

SPA PUMP

SPEED X

Use the ↑ **or** ↓ buttons to select which pre-set speed you would like, and press Enter.

If you don't have Spa lights allocated, the controller will display the message:

NO SPA LIGHT CONFIGURED

and will exit you to the Installer Setup menu after a period of time, or you can press the menu button to exit.

If you have Spa Lights allocated, the controller will display:

S4: SPA LIGHT

When you press Enter you will be able to change the colour of the Spa light. This will be the colour that the Spa light will turn onto when the controller is switched into SPA MODE. It may be a different colour to what is set under the Timer menu.

Use the ↑ **or** ↓ buttons to scroll through the colours, press Enter to select.

Once you have pressed Enter to select, the controller will the display:

SPA TIMEOUT:

04 HOURS

Use the ↑ **or** ↓ arrows to increase or decrease the hours in hourly increments.

The range is OFF, 1 to 24hrs with 04 Hours being the default setting.

*****This setting is here to ensure that the system will switch back over to filtration mode and to ensure that the spa isn't left running constantly. Especially useful if the property is being utilised as a rental or an Air B&B.***

Once the Spa Timeout hours have been selected the controller will return you to the Installer Setup menu.

6.6 HEAT DEMAND

In this menu option you will be able to set the timeframe in which you would like your heater to run. When you enter the menu option, the controller will display:

HEAT	ON
DEMAND	OFF

If you select OFF, the controller will accept the selection and exit you to the Installer Setup menu.

If you select ON, the controller will then display:

HEAT	06.00
DEMAND	22.00 (default times)

Use the ↑ **or** ↓ buttons and the Enter button to allocate a start and finish time. Once the time has been entered, the controller will then display:

SANITISER	ON
	OFF

This Function is here mainly for pool or spa systems that utilise a Dosing system instead of an Ioniser or Chlorinator. If you are heating outside of filtration times you might as well let your dosing system continue to measure, test, and dose your system while the pool or spa system is being heated.

**** If you are running an Ioniser or Chlorinator, you will be best leaving this function turned OFF, to stop the system being over Ionised or Chlorinated.**

Use the ↑ **or** ↓ arrows and press Enter to choose whether you would like sanitisation to occur while heating is active. This function is here to allow sanitisation to occur during heat demand times that are outside of normal filtration times.

Once you have selected the option you would like, the controller will exit you to the Installer Setup menu.

6.7 PUMP CALL

When you enter this menu option, the controller will display:

PUMP	ON
CALL	OFF

If you select OFF, the controller will return you to the Installer Setup menu.

If you select ON, the controller will display: (if a Multi Speed pump is installed)

PUMP CALL
SPEED X

Use the ↑ **or** ↓ buttons to select which pre-set speed you would like and press Enter.

More often than not, this menu option will be utilised in the case of a Heater telling the controller that it is turning on, and the controller needs to turn the filtration pump on. Not the controller telling the Heater to turn on.

Note: There may also be other situations where this function can be utilised. An example of this would be if a pool has an overflow trough, wet edge, negative edge, etc, where pool water needs to be pumped back into the main system.

This can be done by plugging a float level switch (purchased separately) into the pump call port beneath the controller. When the float rises/drops to a set point, it will turn the filtration pump on to start pumping water back into the pool/spa system.

There may be other situations where this feature can be utilised to turn the pump on.

6.8 WATER FEATURE

It is under this menu option that you will be able to set what type of water feature you have installed. When you enter the Water Feature menu, the controller will display:

WATER FEATURE

1. NONE

The other options are:

2. PUMP

3. VALVE

Note: Options 2 and 3 will only appear if a socket or a valve has been allocated for a Water Feature in 6.1, Appliances menu.

If neither have been allocated, then you will not be able to set a type in this menu option.

Use the ↑ or ↓ buttons to scroll through the options available and press Enter to accept the option you wish to set.

If you select 2. PUMP, the controller will accept the option and return you to the Installer Setup menu.

If you select 3. VALVE, the controller will then display:

WATER FEATURE

SPEED 1

You are being asked to select a filter pump speed while the system is running the Water Feature. (If multi speed filter pump is used)

Use the ↑ or ↓ buttons to select which pre-set speed you would like, and press Enter.

Once you have selected a pump speed, the controller will return you to the Installer Setup menu.

6.9 TEMPERATURE SENSOR

In this menu option, you are able to decide which sensor port belongs to which sensor, Pool or Roof.

When you enter the menu, the controller will display:

TEMPERATURE

SENSOR 1.

Use the ↑ or ↓ buttons to scroll between SENSOR 1. And SENSOR 2. Press Enter when the sensor you want to change is displayed.

When you press Enter the controller will display:

SENSOR 1 or 2 TYPE

NOT USED

Using the ↑ or ↓ buttons, you have the option of selecting, NOT USED, POOL, and ROOF.

Scroll up or down to select the option you want, and press Enter to accept.

Repeat to change the other Sensor type.

When you choose a Sensor to be a Pool Sensor the controller will display:

SENSOR 1 or 2 OFFSET

0.0

This option allows you to adjust the offset temperature of the pool sensor in a range of -5.00 to 5.00, in .50 increments. Default is 0.00.

Note: The controller will not allow both the sensor types to be the same.

If you chose SENSOR 1. To be a Pool Sensor, then you will only be allowed to select between Roof, and Not Used for SENSOR 2.

If you wish to swap the sensor types around, you will need to change one of the sensors to Not Used. Then you will be able to change the alternate sensor to what you want it to be.

6.10 EXPANSION UNIT

Initial Installation

When you initially install the Master Controller with either 1 or 2 Expansion Units, **DO NOT TURN THE POWER ON TO ALL 3 UNITS AT ONCE.**

Once the Master Controller has started, turn the power on for the Expansion Unit that will be allocated as Unit 1. Allow a period of about 20seconds to pass before you turn the power on for the Expansion Unit that will be allocated as Unit 2.

In the first 2 minutes after startup, the Master Controller will scan to see if any Expansion Units are connected and will automatically assign them.

Note 1: If you don't leave a time period between turning the Expansion Units on, you may end up with Expansion Unit 2 being assigned as Unit 1.

Note 2: If you don't have a second Expansion Unit it doesn't matter about the time frame.

You will still need to enter 6.10 Expansion Unit menu function in order to increase the amount of Expansion Units that can have Appliances allocated to it. The process is described below.

Secondary Installation.

If at a later stage you add an Expansion Unit, (whether first or second) you need to ensure that the signal cable is connected (as per diagram on page 4). Once the signal cable is connected, plug the Expansion Unit into a power point and turn it on.

The Master Controller will detect that the Expansion Unit is there and assign it to either EXP:1 (if first unit) or EXP:2 (if second unit) and will be displayed as below.

Enter 6.10 Expansion Unit menu function to increase the amount of Expansion Units that can have Appliances allocated to it. The process is detailed below.

When you first enter this menu option the controller will display whether any expansion units are configured and which version if so. For example:

```
EXP:1                1.00B1      *
EXP:2                NONE
```

Note: A blinking dot in the top right-hand corner of the screen, indicates that auto-configuration is in progress.

Pressing the Enter button will move you into the next option which is to choose how many expansion boxes can have Appliances allocated to it. This is displayed as:

```
NUMBER  EXP
UNITS  0
```

Use the ↑ or ↓ buttons to change the number of Expansion Units required: 0, 1, or 2.

Once the amount you require is displayed, press Enter to accept.

If none (0) is selected, the controller will return you to the Installer Setup menu and you will be unable to allocate any Appliances beyond Sockets 1 & 2.

If 1 or 2 is selected, the controller will display a message to reset all addresses:

```
RESET                ALL
ADDRESSES            NO
```

If you DON'T want to reset the Expansion Unit address, press Enter and the controller will return you to the Installer Setup menu.

Note: You will only need to reset the Expansion Unit address if you want to change Units 1 and 2 around or if an Expansion Unit is being added to a system after being installed at another site.

6.10 EXPANSION UNIT continued

If you DO want to reset the Expansion Unit address, use the ↑ or ↓ buttons to change the NO to a YES, press the Enter button. If you press the Enter button the controller will display:

EXP UNITS

RESET ADDRESSES. . . .

Before then displaying

EXP UNITS

RESET DONE !

Press Enter and the Following will be displayed:

SCAN FOR EXP

UNITS NOW? NO

Use the ↑ or ↓ buttons to change the NO to a YES, press the Enter button to scan for Expansion Units. You will only need to scan for Expansion Units if you have Reset the Expansion Units addresses.

If you select NO the controller will return you to the Installer Setup Menu.

6.11 SET TIME

When you first set up the controller, it is in this this menu option, that you are able to set the time. When you enter this menu option the controller will display:

AUTO SET

TIME? YES

Use the ↑ or ↓ buttons to alternate between YES or NO. Press Enter to accept.

If you select Yes, the controller will ask for your location and display:

LOCATION

ACT

Use the ↑ or ↓ buttons to scroll through the options available and press Enter to accept the option you wish to set. The controller will then display:

AUTO ADJUST

DST YES

The controller is asking if you would like its time clock to be automatically adjusted at Day Light Savings time.

Use the ↑ or ↓ buttons to alternate between YES or NO. Press Enter to accept.

Once you have pressed Enter to select either option, the controller will return you to the Installer Setup menu.

Once the time is set, the controller will automatically update from internet time when the controller connects to Wifi.

If you selected NO at the AUTO SET option, you will then be able to set the time manually.

When you enter this menu, the controller will display:

SET TIME

XX.XX

Use the ↑ or ↓ buttons to scroll through the hours and press Enter when correct hour time is displayed.

Once you press Enter, you will then be able to adjust the minutes as above.

When you press Enter to accept the minutes, the controller will return you to the Installer Setup menu.

Note: Controller time is set in 24hr time, 6pm is 18.00.

6.12 WIFI

This menu option is used for setting up the WIFI connection to the controller.

When you enter the menu option, the controller will display:

```
WIFI                ON
                   OFF
```

If you select OFF, the controller will disable the use of the WIFI connectivity and return you to the Installer Setup menu.

If you select ON, the controller will display:

```
WIFI NETWORK
#####            XX%
```

The controller is displaying which Wifi network it is connected to and the percentage of reception that the controller is receiving.

Press the Enter button to move onto the next option and the controller will display:

```
SEARCH WIFI        YES
NETWORK           NO
```

Use the ↑ **or** ↓ buttons to alternate between YES or NO. Press Enter to accept.

If you select NO, the controller will move you onto the next option.

If you select YES, the controller will display:

```
SEARCHING FOR
WIFI NETWORK.....
```

The available networks will be listed in order of strongest signal strength to the weakest and are displayed as: (for example)

```
MY NETWORK
-30dBm  WPA/2
```

The first line shows the network name, the second line shows the Wifi signal strength in dBm and the Wifi network security type.

Wifi signal strength ranges from -30dBm (being the strongest) to -100dBm (being the weakest).

The network security types that the Oasis SMART control system will support are listed below:

Type	Remarks	Type	Remarks
OPEN		WPA2	WPA2 PSK
WEP		WPA/2	WPA & WPA2 PSK
WPA	WPA PSK	WPA2E	WPA2 Enterprise

Wait for a few seconds, then use the ↑ **or** ↓ buttons to scroll through the available networks, press Enter to select the network you want to connect too.

The controller will then ask you for the password for the network connection, displayed as:

```
ENTER PASSWORD    a
a
```

The controller will alternate the first line between displaying Enter Password and showing the Wifi Network Name that you are trying to connect to.

Use the ↑ **or** ↓ buttons to scroll through the available characters to enter your passcode. You can use the Back button to return to a character that isn't correct.

6.12 WIFI continued

****The last character on the top line is indicating what type of character is being inputted. In the case of the above display, you would be entering a lower-case alphabet character. Use the SPA button to change the Input Type to what is required as you enter the passcode.**

<i>Displayed</i>	<i>Input Type</i>
a	Lower Case Alphabet
A	Upper Case Alphabet
0	Numeric
#	Symbols

** The controller will not support the follow Symbols:

~	Tilde	will display -> instead
\	Backslash	will display ¥ instead.

Once you have entered the passcode, press Enter and the controller will display:

CONNECTING TO *
'MY NETWORK'

The blinking dot in the top right corner of the screen is an indication that connection is in progress.

If the password is incorrect the controller will display:

WIFI PASSWORD
INCORRECT

You will need to enter the password in again correctly.

If connection is successful the controller will display:

CONNECTED TO
'MY NETWORK' π

The small downward facing arrow indicates that the controller is connected to the Wifi and is positioned above the Wifi wording on the face label.

Once the controller is connected, the controller will then display:

RESET WIFI YES
SETTINGS NO

IF NO, the controller will return you to the Installer Setup menu.

If YES, the controller will reset any existing Wifi settings, including network password.

When yes is selected the controller will display:

WIFI SETTINGS
RESET OK

The controller will then restart, displaying:

CONTROLLER
RESTARTING

and go into Wifi configuration mode after the reboot, the Wifi arrow will blink.

WARRANTY

THIS EQUIPMENT HAS BEEN MANUFACTURED AND TESTED TO THE HIGHEST STANDARD AND ACCORDINGLY CARRIES THE FOLLOWING WARRANTY.

Australian Consumer Law

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Your **Oasis Aquatics Smart Controller** is covered by a limited **three (3) year** warranty against component failure or faulty workmanship and commences from the date of purchase / installation.

This is a back to base warranty excluding on-site labour or travel costs to or from installation site. Replacement of routine maintenance items are not covered under warranty. Defective equipment must be returned to the manufacturer or dealer as soon as the purchaser becomes aware of the defect and all transport must be prepaid. Neither the manufacturer nor the dealer shall be responsible for any goods damaged in transit.

Adverse operating conditions beyond the control of the manufacturer such as improper voltage or water equipment will render this warranty null and void.

Any liability of the manufacturer pursuant to the Trade Practices Act 1974, as amended for a breach of a condition or warranty shall be limited to replacing or acquiring the equipment (or part thereof) where the same has been supplied.

The maximum liability incurred by the manufacturer shall not in any case exceed the contract price for the equipment or the product parts or components thereof claimed to be defective. Further, the manufacturer shall not be liable for any loss, damage or delay directly or indirectly caused by any malfunction of or defect of or failure of the equipment other than as expressly provided in this warranty.

The manufacturer will not be held liable for damage caused by, but not limited to, corrosion, scaling or stress.

The Warranty is void under the following circumstances:

- Installation is carried out incorrectly by any person other than a person authorised by us to do so.
- Insect infestation or penetration by dust, sand or other foreign particles
- Damage beyond our control
- Equipment that has been damaged due to misused, power surges, neglected, corrosion from pool chemical fumes, lightning strikes or repaired without authorisation or altered in any way.
- This warranty is not transferable under any circumstance.
- Keep your original purchase invoice and serial number in a safe place.



If the power cord is damaged, do not use the controller.

Return the unit to the supplier for repair.

WARRANTY REGISTRATION

Registering your Oasis Aquatics products is fast and easy, providing peace of mind that you've got great backup support for the life of your pool heating!

- Go to sunloverheating.com.au/service-request/warranty-registration or scan the QR code
- No Need to create an account
- Fill in your details
- Upload a photo of your serial number
- Submit



TECHNICAL SUPPORT

For all warranty enquiries please contact your local distributor or contact **Sunlover Heating** directly and we will either direct you to your nearest authorised repairer or assist you.

OASIS AQUATICS

Ph: 1800 815 913

Website: oasisaquatics.com.au

Email: info@oasisaquatics.com.au

DISCLAIMER

Information in this guide is intended to provide general information on a particular subject(s) in good faith and is not an exhaustive treatment of such subject(s). Its use is beyond the control of the author, contributor, publishers and distributors and should not be relied upon without consulting your local Professional for comprehensive advice.

This guide includes subject(s) that should only be performed by or under the direction and advice of your local Professional and under no circumstances should the guide be used as a substitute for such professionals.

No representations or warranties are made that the content, advice and recommendations in this guide are current, free from errors or omissions, or appropriate for the user's circumstances or abilities. No liability or responsibility is accepted for any loss suffered as a result of any user's reliance on such content.